## RS

The Rocker Switch modules RS1 and RS2 are designed to be installed into front panels, multifunction grips or other switching units.

#### RS1

This module is standard rocker switch with a single switch function in both directions.

### RS2

With the RS2 a double switch function is available in both directions.

### QS

The Quadrant Switch modules QS1 and QS2 are designed to be installed into front panels, multifunction grips or other switching units.

#### QS1

This module is a quad switch similar to a "mirror switch" made of four K12 switches, designed for 4 switching functions (e.g. for movements in four directions: up, down, left and right).

## QS2

This module is similar to the QS1 but has a double switch function and is made up with eight K12 switches allowing additional functions in each direction.







Technical Data			
Types	RS1	two K12 switches, one switching function per direction	
	RS2	four K12 switches, two switching functions per direction	
	QS1	four K12 switches, one switching function per direction	
	QS2	eight K12 switches, two switching functions per direction	
Dimensions (length, width, height)	RS QS	43 x 40.7 x 27.55 mm 58.9 x 43 x 27.5 mm	
Operating life		> 1 million cycles	
Operating temperature - Storage - Working		- 40℃ to 85℃ - 25℃ to 85℃	
Protection Level		IP65 (from above when mounted with extra sealing)	
Main features of K12		Tactile feedback, positive snap-point (more technical details see datasheet for K12 switches)	




					4	5
	Example	RS1	KRSA	BK	S	C
Туре		T f	†	Î	1	
	QS 1 = four K12 switches					
( )	QS 2 = eight K12 switches					
Rocker Switch (RS)	RS 1 = two K12 switches					
,	RS 2 = four K12 switches					
Standard cap	KQS1 = for QS					
•	KRSA = for RS					
Cap colour	BK = black					
Cap decals	N = none	-				
•	S = standard decals (arrows)*					
	C = customized					
Module mounted	C = standard mounted					
	Quadrant Switch (QS) Rocker Switch (RS) Standard cap Cap colour Cap decals	Type Quadrant Switch (QS) QS 1 = four K12 switches QS 2 = eight K12 switches Rocker Switch (RS) RS 1 = two K12 switches RS 2 = four K12 switches RS 2 = four K12 switches KQS1 = for QS KRSA = for RS  Cap colour BK = black  Cap decals N = none S = standard decals (arrows)* C = customized	Type Quadrant Switch (QS) QS 1 = four K12 switches QS 2 = eight K12 switches Rocker Switch (RS) RS 1 = two K12 switches RS 2 = four K12 switches Standard cap KQS1 = for QS KRSA = for RS  Cap colour BK = black  Cap decals N = none S = standard decals (arrows)* C = customized	Type Quadrant Switch (QS) QS 1 = four K12 switches QS 2 = eight K12 switches Rocker Switch (RS) RS 1 = two K12 switches RS 2 = four K12 switches Standard cap KQS1 = for QS KRSA = for RS  Cap colour BK = black  Cap decals N = none S = standard decals (arrows)* C = customized	Type Quadrant Switch (QS) QS 1 = four K12 switches QS 2 = eight K12 switches Rocker Switch (RS) RS 1 = two K12 switches RS 2 = four K12 switches RS 2 = four K12 switches Standard cap KQS1 = for QS KRSA = for RS  Cap colour BK = black  Cap decals N = none S = standard decals (arrows)* C = customized	Type Quadrant Switch (QS) QS 1 = four K12 switches QS 2 = eight K12 switches Rocker Switch (RS) RS 1 = two K12 switches RS 2 = four K12 switches RS 2 = four K12 switches Standard cap KQS1 = for QS KRSA = for RS  Cap colour BK = black  Cap decals N = none S = standard decals (arrows)* C = customized


<sup>\*</sup> see drawing below

# **Rocker Switch**

# Install dimensions

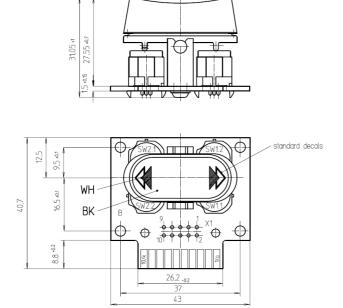

# Sealing

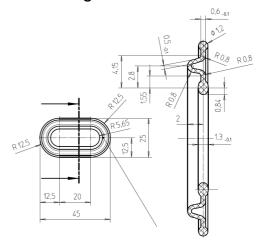

# PIN Assignment

Switch No.	Connector-No.X1 Input   Output		Pad-Bar Input   Output		
SW1.1	1	2	1	Ь	
SW1.2	3	4	3	d	
SW2.1	7	8	7	8	
SW2.2	9	10	þ	10	




# **Quadrant Switch**

# Install dimensions

#### 582 1912 Sw22 S

# Sealing

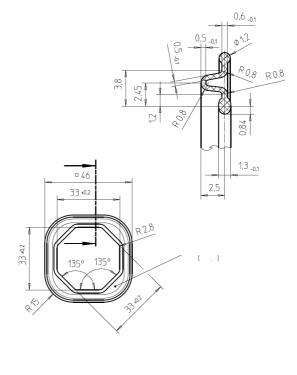

# PIN Assignment

0 11 1	<u> </u>	11 1/4			
Switch	Connector-No.X1		Pad-Bar		
Nr.	Input	Output	Input	Output	
SW1.1	2	4	2	Э	
SW1.2	1	3	Ь	C	
SW2.1	14	16	8	9	
SW2.2	13	15	h	İ	
SW3.1	6	8	4	5	
SW3.2	9	11	f	g	
SW4.1	10	12	6	7	
SW4.2	5	7	d	е	



**DeltaTech Controls** – A CoActive Technologies Company - **worldwide Facilities** With sales offices and manufacturing facilities located worldwide, please visit our website at www.deltatechcontrols.com for a complete listing and to find the office nearest to you.

# Germany

## Headquarter

Holzhauser Strasse 26-32 D-13509 Berlin Germany phone: +49 30 43 999 0

fax: + 49 30 43 999 203

Mail: sales.dtc.europe@coactive-tech.com

#### USA

5288 Valley Industrial Blvd. S Shakopee, MN 55379 USA

phone: + 1 952 403 7400 fax: + 1 952 233 9707

Mail: sales.dtc.americas@coactive-tech.com

#### China

3rd F. North Building No. 239 Gangao Rd. W.G.Q.FTZ. Pudong Shanghai. 200131 China

phone: +86 13810247876 fax: +86 21 3393 8281

Mail: sales.dtc.asia@coactive-tech.com

#### France

2 Boulevard Michaël Faraday Arlington Square, Bâtiment B Serris – F 77716 Marne-La Vallée Cedex 4 France

phone: + 33 160 24 51 51 fax: + 33 3 84 69 08 97

Mail: sales.dtc.europe@coactive-tech.com

#### Japan

9F, Ariake Frontier Building B 3-1-25 Ariake, Koto-ku, Tokyo 135-0063

phone: + 81 3 5530 9365 fax: + 81 3 5530 8737

Mail: sales.dtc.asia@coactive-tech.com

# Korea

Room #503, TaeSung Building, 265-5, SeoHyun - Dong, PuDang - Gu, SeonNam - Si, GyeonGi - Do, Korea 463-050 phone: + 82 32 704 0347 fax: + 82 32 704 0348

Mail: sales.dtc.asia@coactive-tech.com

No information and data contained in this publication shall be construed to create any liability on the part of DeltaTech Controls GmbH. Any new issue of this publication shall automatically invalidate and supersede any and all previous issues. Dimensions are subject to change without prior notice.

All Copyrights belong to DeltaTech Controls GmbH and CoActive Technologies. All other trademarks or registered trademarks are property of their respective owners.

All data subject to change without notice. ©2010